KEY

--- Equipment boundaries

Single-rate Whole Current Meter with Isolating Switch

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.


3 Connected by meter operator only

4 Connected by distributor only

5 Connected by meter operator or distributor where works on cut-out needed.

6 Connectable by meter operator or distributor or where distributor's policy permits by the customer. **NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information**

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

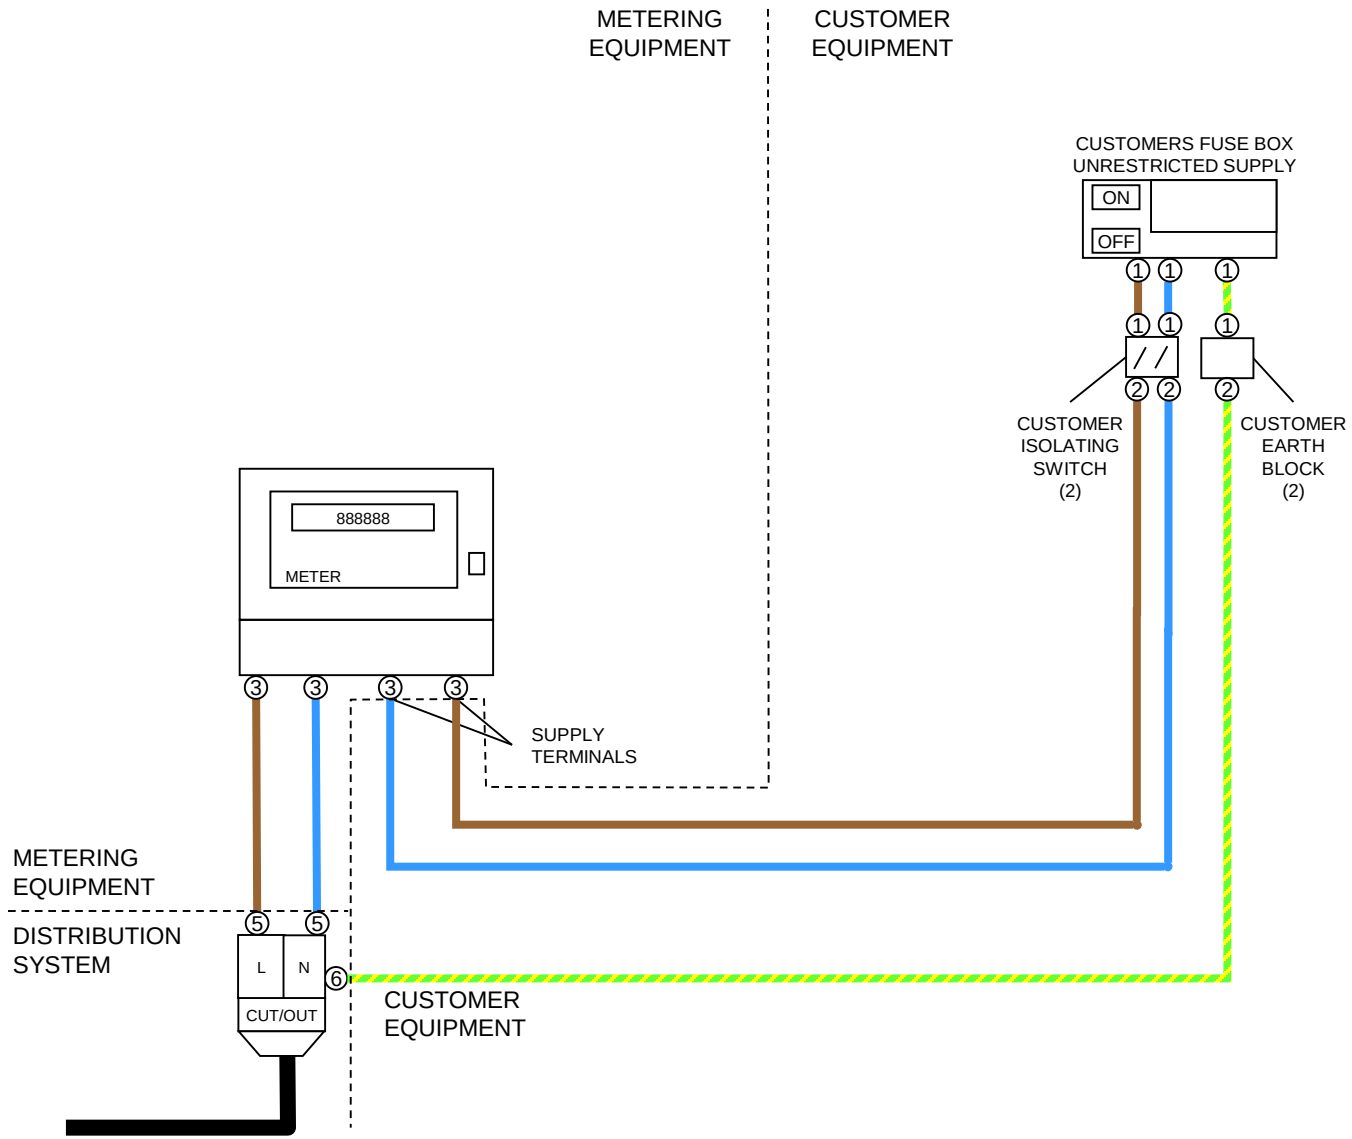

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios
These diagrams should not be taken as definitive wiring diagrams for any installation.

KEY

--- Equipment boundaries

Single-rate Whole Current Meter

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.


3 Connected by meter operator only

4 Connected by distributor only

5 Connected by meter operator or distributor where works on cut-out needed.

6 Connectable by meter operator or distributor or where distributor's policy permits by the customer. **NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information**

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

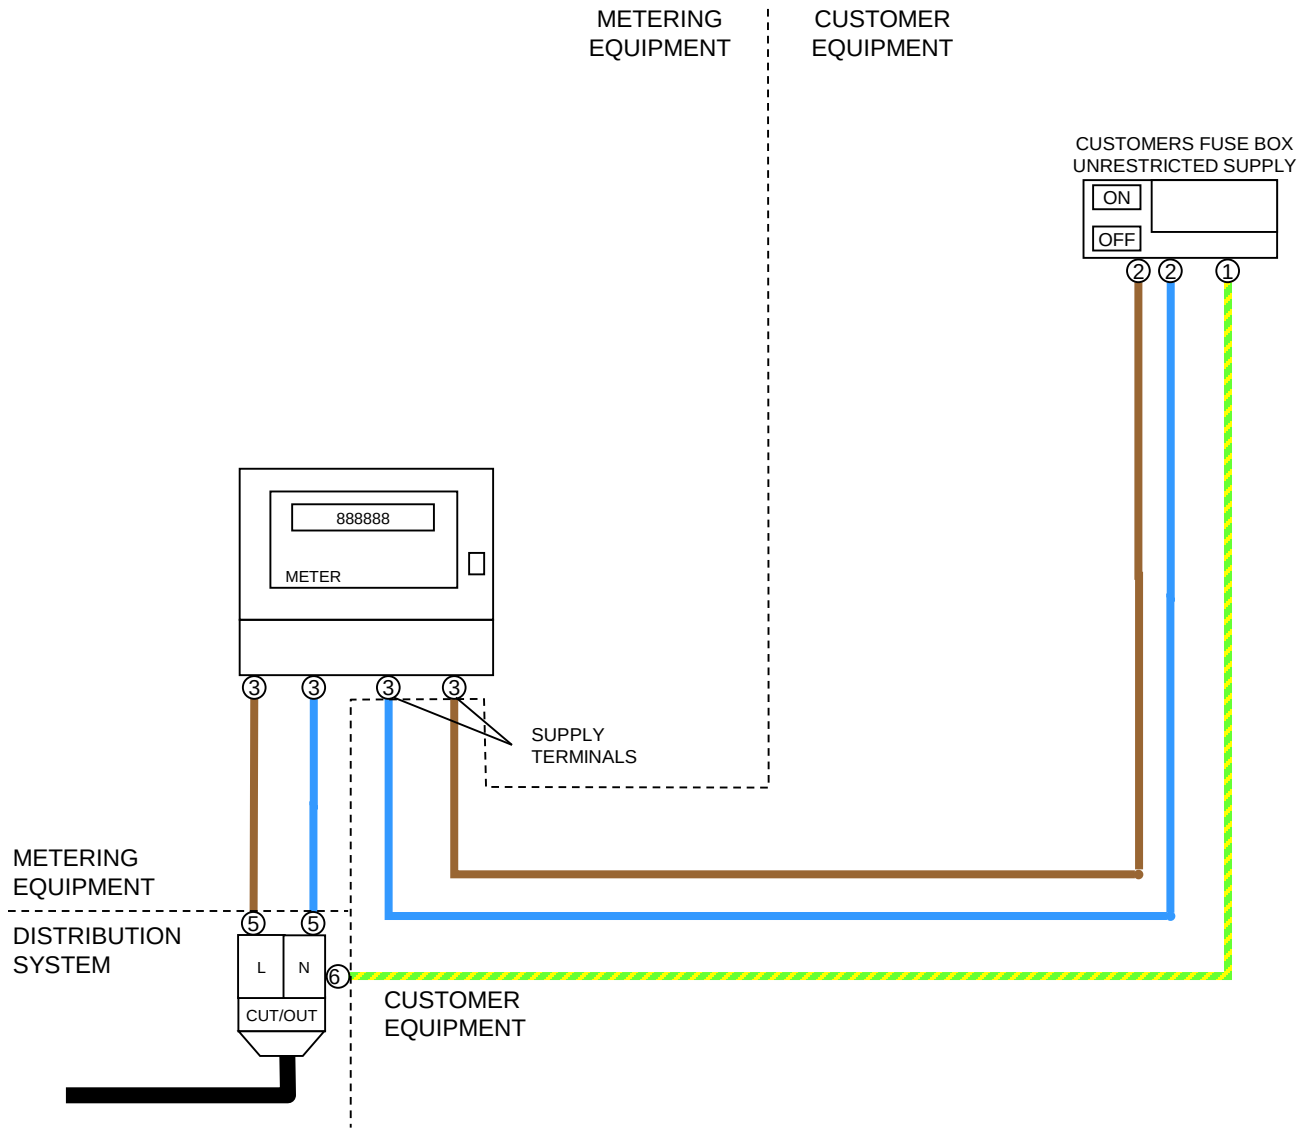

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios
These diagrams should not be taken as definitive wiring diagrams for any installation.

KEY

--- Equipment boundaries

Multi-rate Whole Current Meter with Isolating Switch

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.


3 Connected by meter operator only

4 Connected by distributor only

5 Connected by meter operator or distributor where works on cut-out needed.

6 Connectable by meter operator or distributor or where distributor's policy permits by the customer. **NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information**

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

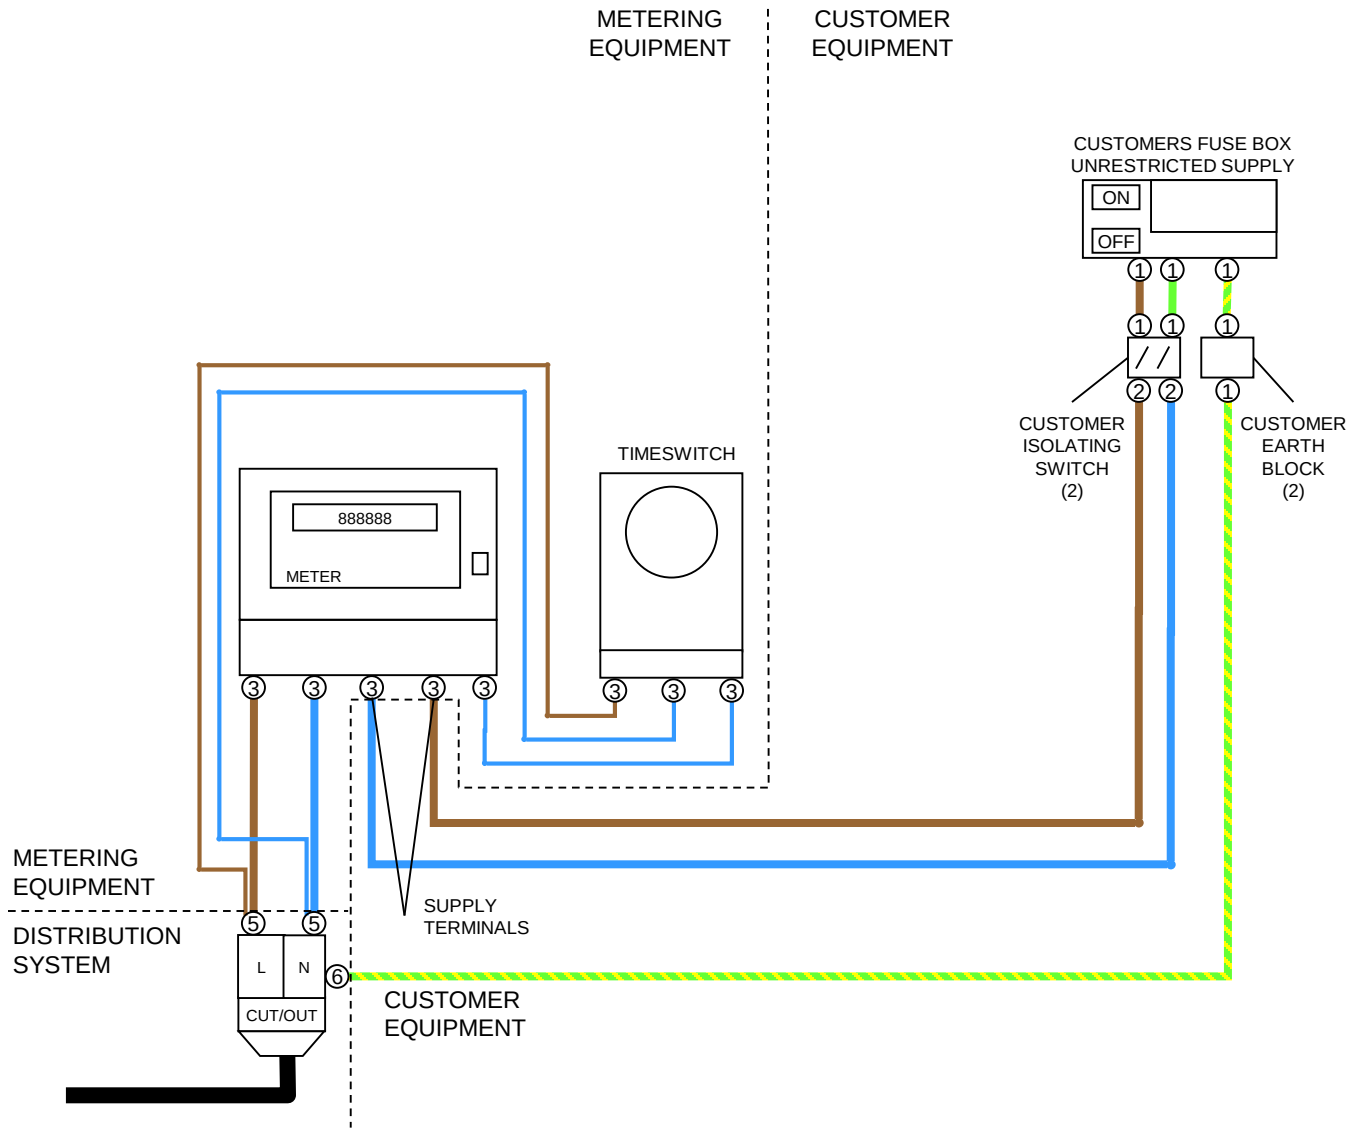

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios
These diagrams should not be taken as definitive wiring diagrams for any installation.

KEY

--- Equipment boundaries

Multi-rate Whole Current Meter with Isolating Switch and controlled Off-Peak Load Through Meter 5th Terminal

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.


3 Connected by meter operator only

4 Connected by distributor only

5 Connected by meter operator or distributor where works on cut-out needed.

6 Connectable by meter operator or distributor or where distributor's policy permits by the customer. **NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information**

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

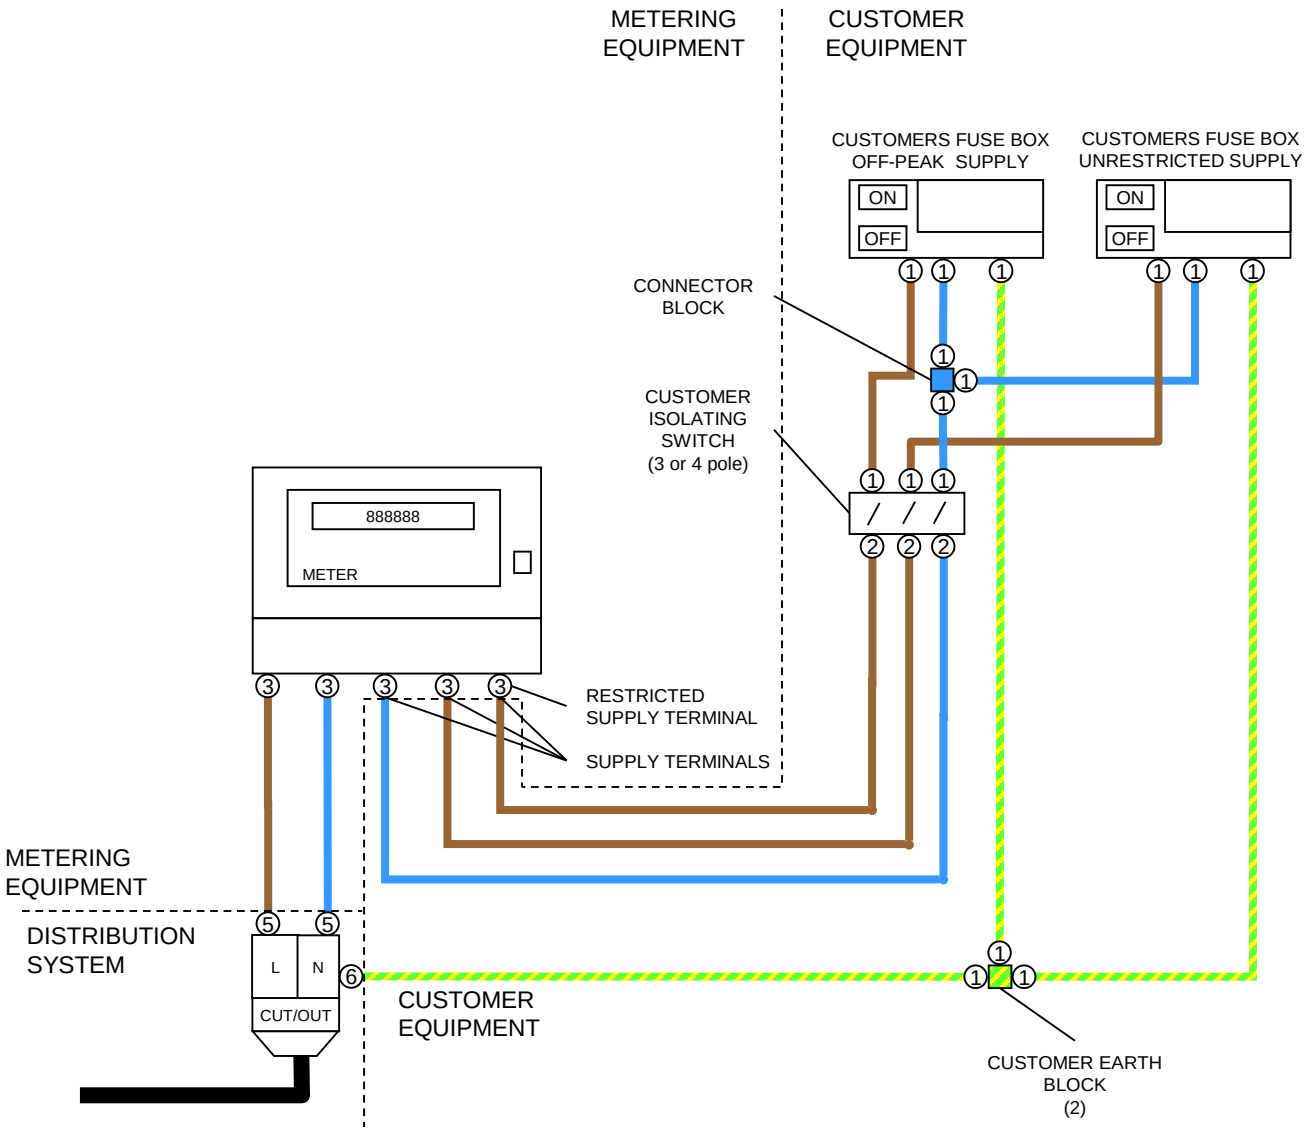

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios These diagrams should not be taken as definitive wiring diagrams for any installation.

KEY

--- Equipment boundaries

Multi-rate Whole Current Meter with Isolating Switch and controlled Off-Peak Load

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.


3 Connected by meter operator only

4 Connected by distributor only

5 Connected by meter operator or distributor where works on cut-out needed.

6 Connectable by meter operator or distributor or where distributor's policy permits by the customer. **NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information**

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

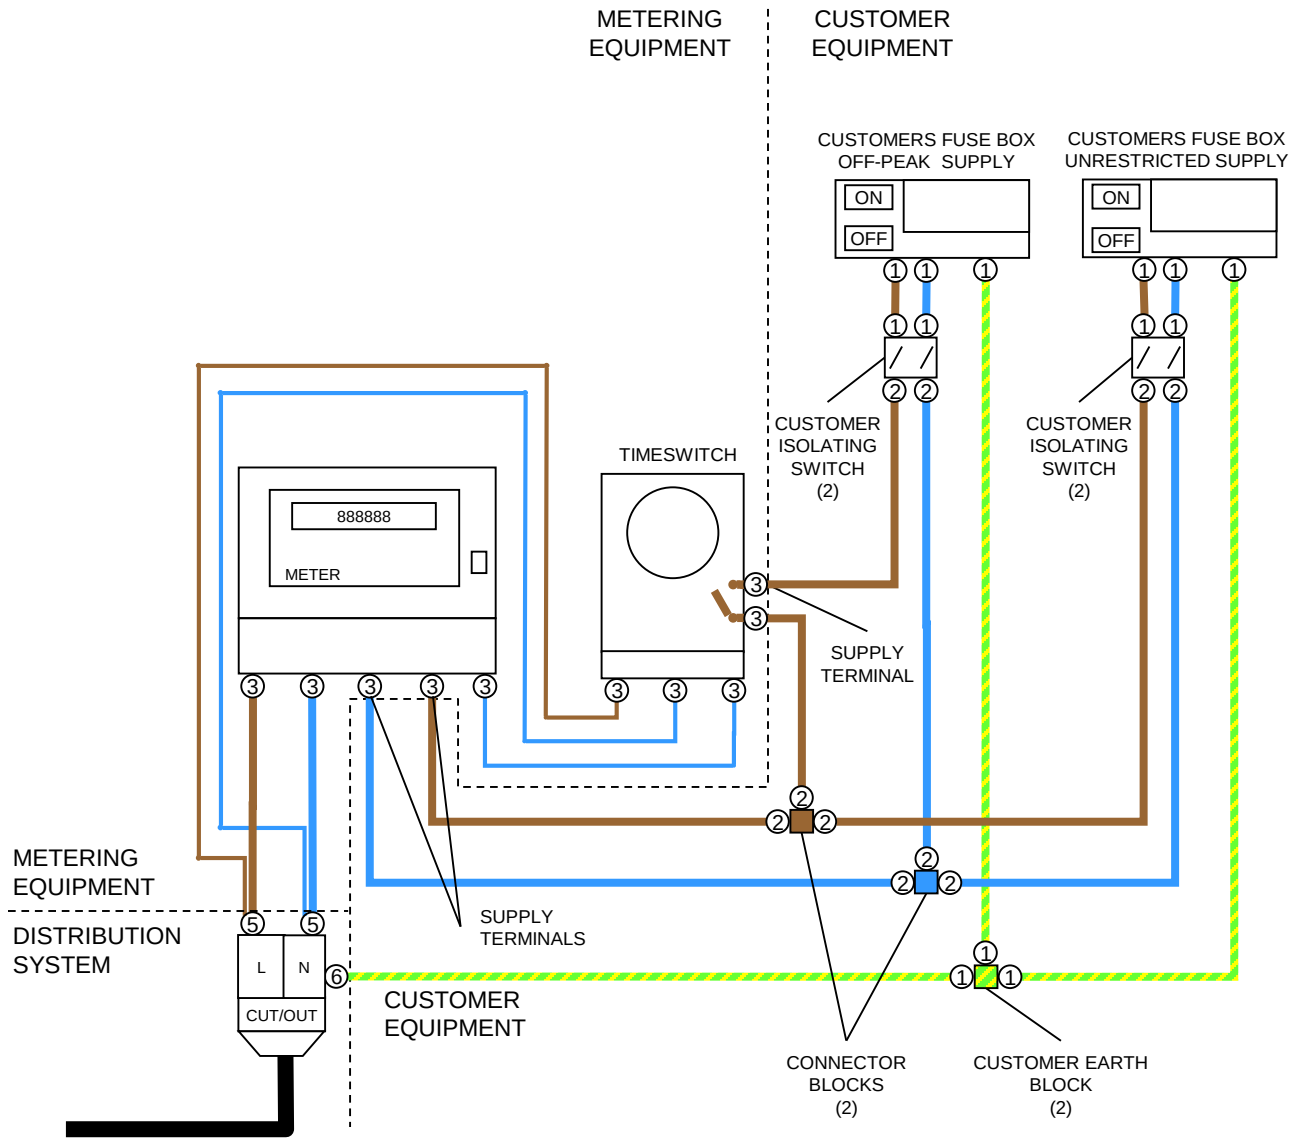

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios
These diagrams should not be taken as definitive wiring diagrams for any installation.

KEY

- - - Equipment boundaries

LV Current Transformer Metering Installation

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.

3 Connected by meter operator only

4 Connected by distributor only.
For main power cable connection if customer cable is fed through to distributor circuit breaker/isolator with no intermediate connections there are fewer terminations but lugs would be provided by the customer.


5 Connected by distributor. Cable lugs provided by the customer if connecting to load side terminals in CT enclosure

6 Connectable by distributor or where distributor's policy permits by the customer.
NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

7 CT Enclosure

8 Distributor's Metering Test Terminals Block

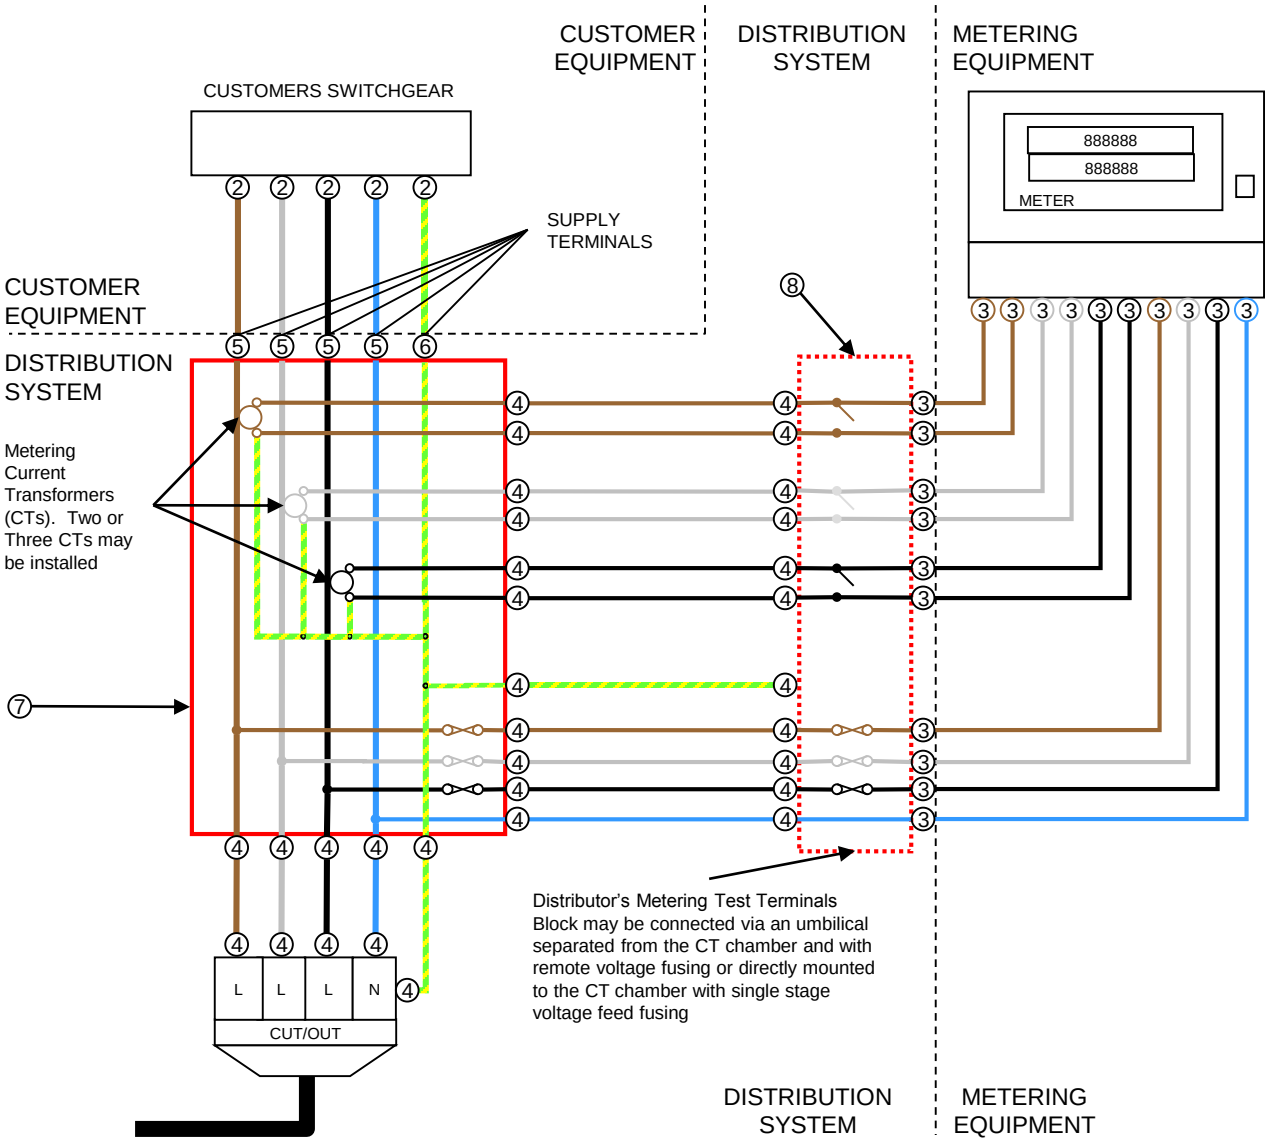

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios
These diagrams should not be taken as definitive wiring diagrams for any installation.

KEY

--- Equipment boundaries

HV Current Transformer Metering Installation

1 Connected by an electrically competent person.

2 An electrically competent person may provide and connect these assets in preparation for later connection to the metering system or cut-out at the supply end in accordance with note (6) below. Once energised persons may be unable to safely work upon these supply side of the customer isolating switch or connector blocks without prior de-energisation of the incoming supply by a MOCOPA® Party.

3 Connected by meter operator only

4 Connected by distributor only.
For main power cable connection if customer cable is fed through to distributor circuit breaker/isolator with no intermediate connections there are fewer terminations but lugs would be provided by the customer.


5 Connected by distributor. Cable lugs provided by the customer if connecting to load side terminals in CT enclosure.

6 Connectable by distributor or where distributor's policy permits by the customer.
NOTE: Not all distributors permit parties other than the distributor's own staff or the meter operator's staff to make connections to its distribution assets. Reference should be made to the distributor's MOCOPA® Distribution Business Information

If the PME capability of the distributor's service termination's neutral conductor is not clear to the meter operator enquiries should be made with the distributor.

7 Metering Unit

8 Distributor's Metering Test Terminals Block

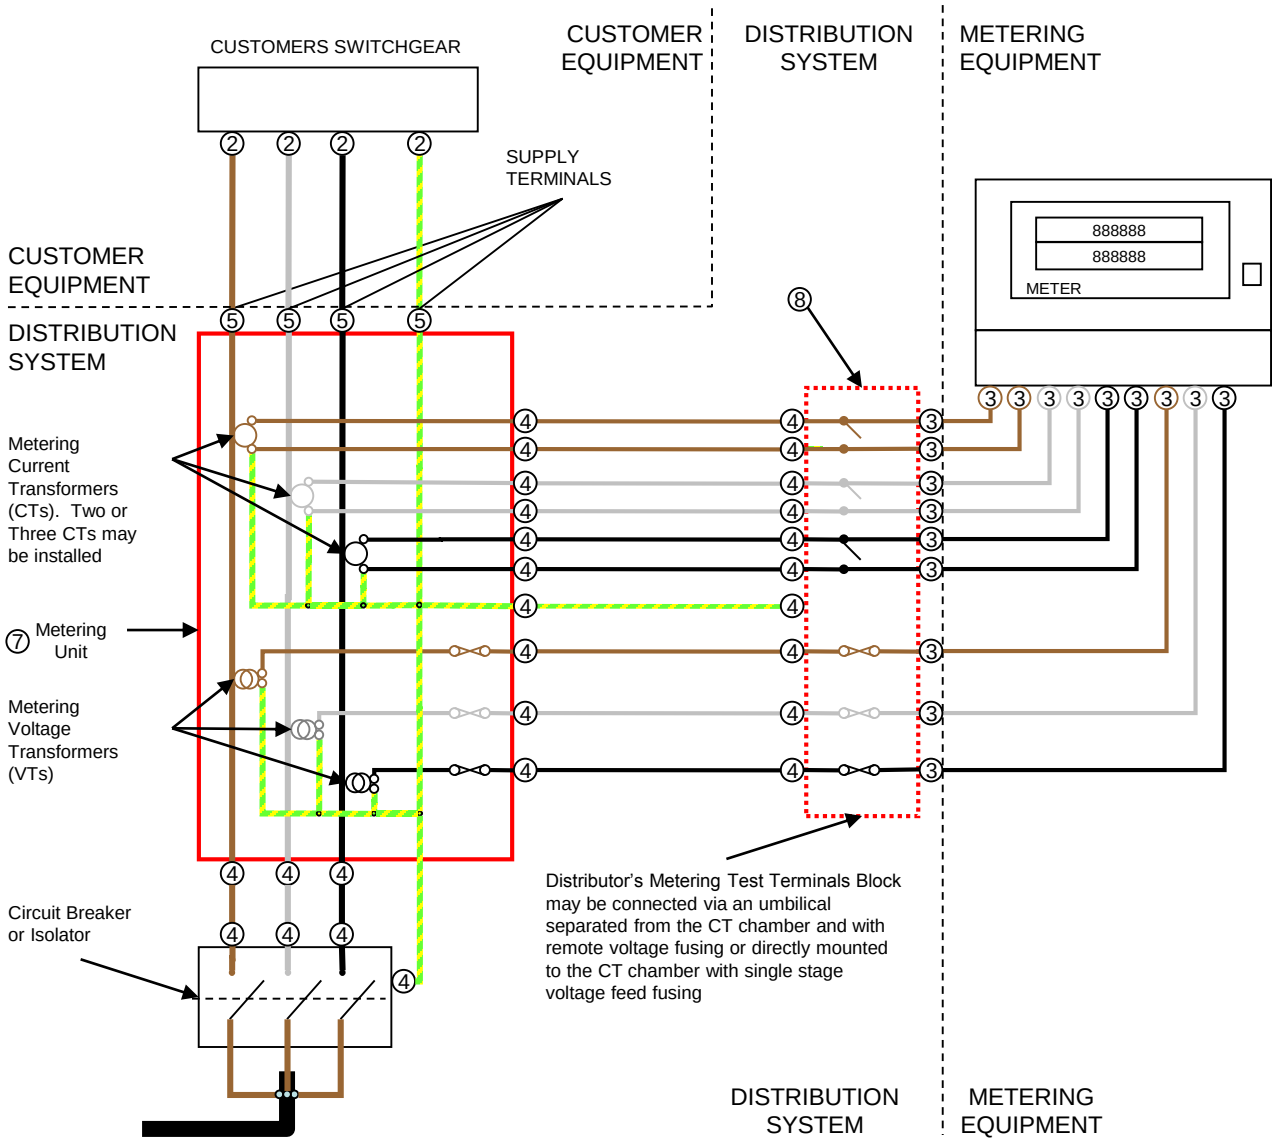

Note : The diagrams are illustrative only, their purpose is to clarify the boundaries of responsibility, they do not show all possible scenarios
These diagrams should not be taken as definitive wiring diagrams for any installation.